

LED Lamp Pendant

401186

INSTALLATION SHEET

Please Note:

- All Kuzco LED fixtures come with pre-wired LED module(s).
- Unless instructed to do so, please do not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage.
- For dimming, an ELV (Electronic Low Voltage) dimmer is required.

1. Remove the fixture from its original packaging. Remove the mounting plate from within the canopy and attach it to the electrical junction box on the ceiling using the two screws provided in the hardware package.

2. Select the desired length you would like the fixture to hang down from the ceiling (72" maximum). To adjust the length of your pendant, push the sleeve in where the support cable comes out from the canopy. Pull or push the cable to lengthen or shorten. When you have selected your desired length, release the sleeve and the cable will lock.

Please Note: It is recommended to periodically pick up the canopy and check the fixture height and balance.)

3. To adjust the length of the electrical wire, undo the wire safety lock in the center of the canopy until the electrical wire can move freely. When you have achieved the desired length, tighten the wire safety lock (3) in the center of the canopy, (3a) slide the safety grip down the wire, close as possible to where the wire enters the inside of the canopy. Firmly lock the wire in place.

4. Attach the canopy to the mounting plate, which is attached to the electrical junction box on the ceiling. First attach all wiring with the provided marrets (white to white "N", black to black "L", ground to ground "G"). Align the two holes from the canopy to the two screws pointing down from the mounting plate. Push the screws through the canopy plate so they are poking through, once this is complete you can screw on the decorative nuts until tight. (It is recommended that two people complete this portion of the installation.)


5. Release the wire strain relief set screw (5a) followed by unscrewing, counter clockwise, the strain relief (5b) from metal plate (5c). Now slide strain relief and plate up the wire to allow space for glass installation. Tilt the glass gently and slide this on top of the metal plate. Make sure the glass is resting securely on the plate. **DO NOT LET GO** of the glass shade until it is securely resting on the plate. Gently lower the metal cap onto the glass. Retighten the strain relief.

6. You have now completed the installation of your fixture. Please enjoy.

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-877-452-6858

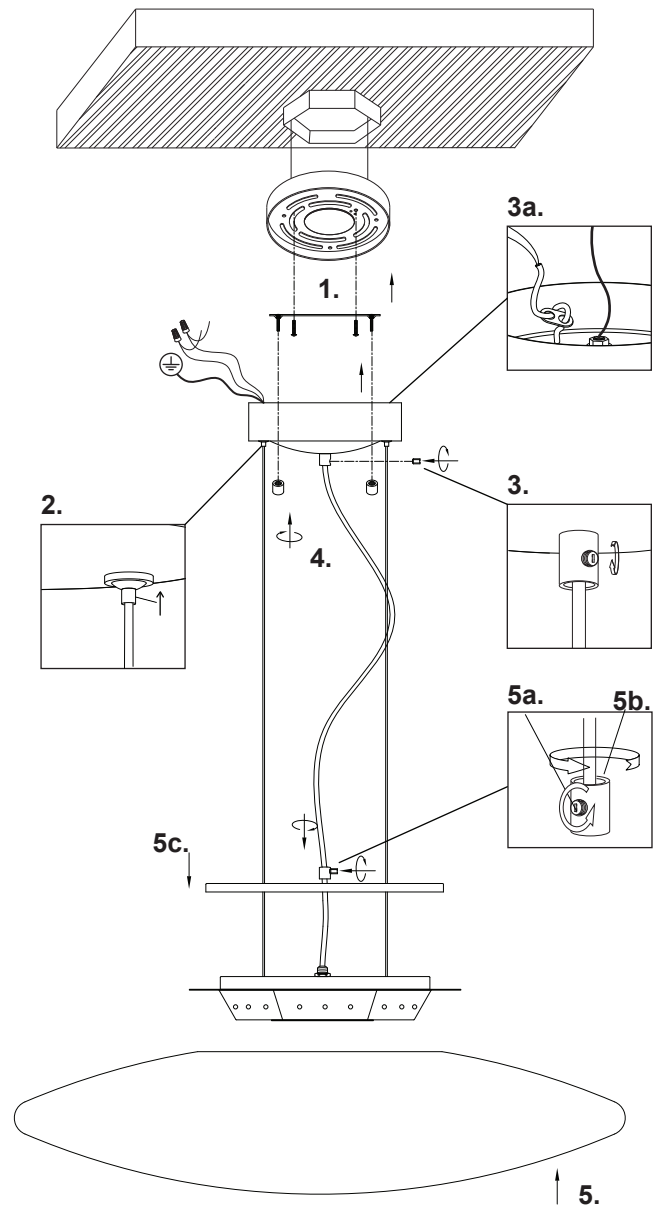

KUZCO LIGHTING

19054 28th Avenue Surrey, BC Canada V3S 6M3
T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196
W: kuzcolighting.com
20141112