


GreenConnect™ Wireless

How to Pair for Initial Setup

Step 1

Open the Main Menu

- Press and hold the test button or top paddle on a load control device (Load Controller or Line Voltage Switch or Dimmer) for ~7 sec until the LED blinks yellow once, then release. The device is now in the main menu.

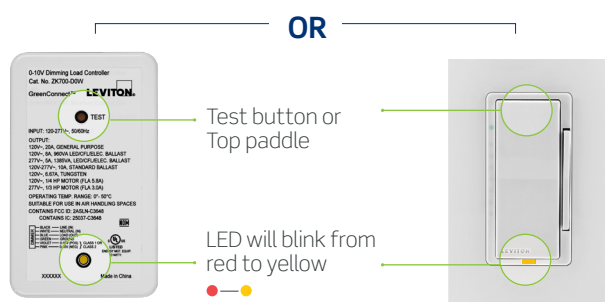


- Red Blinks 3X:** On initial set up only
- Fast Yellow Blinks:** Device is in main menu

Step 2

Create a Network

- Tap the test button or top paddle twice to assign the device as the Network Manager. The LED blinks green to indicate the network is open and toggles loads OFF/ON twice.

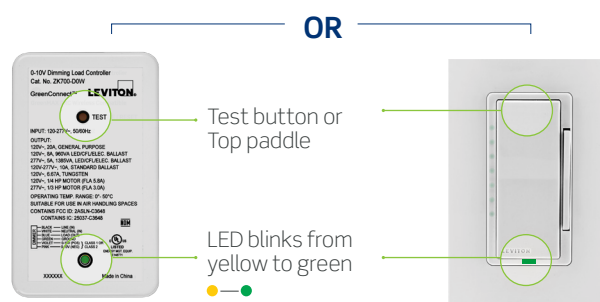


- Fast Yellow Blinks:** Device is in main menu
- Slow Green Blinks:** Network is open


Step 3

Add Devices to the Network

- Open the main menu on the next device to add to the network (follow Step 1). Tap once on the test button or top paddle. The LED will slowly blink green (searching).

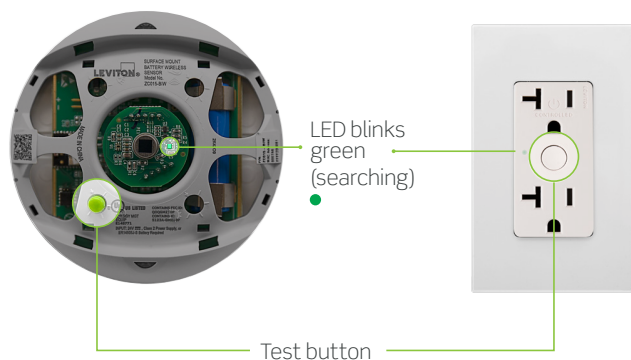

- When device joins the network, loads will toggle OFF/ON twice. Repeat until all devices have been added.

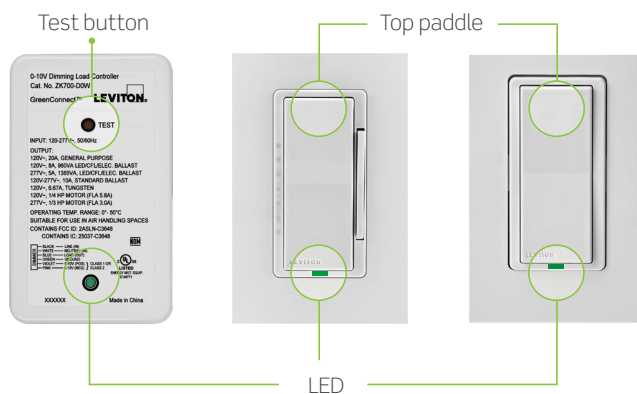


Step 4

Close the Network

- Tap the test button or top paddle once on the Network Manager to close the network. All loads in the network will toggle OFF/ON twice.


- Blinks Red:**
LED changes to green
- Slow Green Blinks:**
Action applied

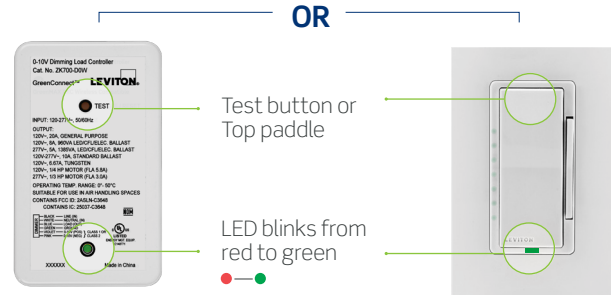

Helpful Guides:

Remove / Reset a Device as Needed

- Hold the test button or top paddle on the device to remove/reset ~12 sec until you see the LED blink yellow twice and release.

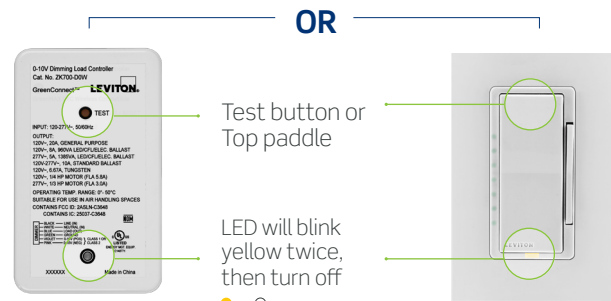


Adjusting System Settings as Needed

- i Open the main menu on the Network Manager (follow Step 1).



- ii Tap the test button or top paddle the number that corresponds to the feature menu you want to access. The LED blinks a green count to confirm the feature menu is accessed, LED pauses, then blinks a yellow count to confirm the feature setting applied.

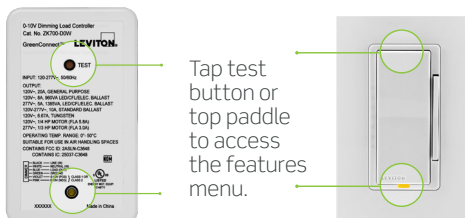


- Green Blink Count**
Feature menu
- Yellow Blink Count**
Feature setting

- iii To change a system feature tap the test button or top paddle the number that corresponds to the new setting you want applied. The LED blinks a yellow count to confirm the change was applied.

- iv To exit out of the **feature menu**, press and hold the test button or top paddle until the LED blinks yellow once then release. The LED will blink a fast yellow when you are in the main menu.

To exit from the **main menu** press and hold the test button or paddle again until the first yellow blink and release to close the main menu.

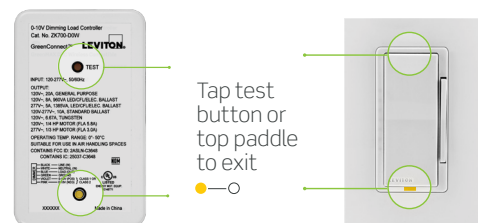

- Fast Yellow Blinks**
Main menu
- One Yellow Blink**
Exit Menu(s)

Feature Menus

Feature # 3: Occupancy Auto-ON Level	
Setting #	Value
1	100%
2	50%
3	25%
4	Manual-ON (vacancy)
5	Restore last level (default)

Feature # 4: Occupancy Sensitivity	
Setting #	Value
1	Medium
2	Low
3	High (default)

Feature # 5: Vacancy Time-Out	
Setting #	Value
1	Test mode (60 seconds for five minutes then reverts to prior setting)
2	30 minutes
3	20 minutes (default)
4	10 minutes
5	5 minutes
6	Disabled

Feature # 6: Partial-OFF Level	
Setting #	Value
1	Disabled (default)
2	50%
3	25%

Feature # 7: Partial-OFF Time-out	
Setting #	Value
1	30 minutes
2	20 minutes (default)
3	10 minutes
4	5 minutes

Feature # 8: Daylighting Target	
Setting #	Value
1	Disabled (default)
2	25 footcandles
3	35 footcandles
4	45 footcandles

Feature # 9: Vacancy Level	
Setting #	Value
1	0% (default)
2	50%
3	25%

Feature # 10: Load Control	
Setting #	Value
1	Network
2	Local (default)



Leviton Manufacturing Co., Inc. Lighting & Controls

10385 SW Avery Street, Tualatin, OR 97062 **tel** 800-736-6682 **tech line** (6:00AM-4:00PM PT Mon-Fri) 800-959-6004

Visit our Website at: www.leviton.com/greenconnect

©2026 Leviton Manufacturing Co., Inc. All rights reserved. Subject to change without notice.

LES-G-10817A/E26-cg