M31004

NUMERICAL SEQUENCE

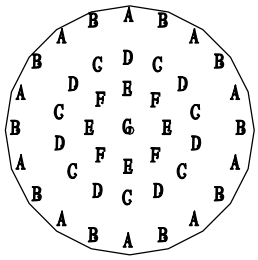

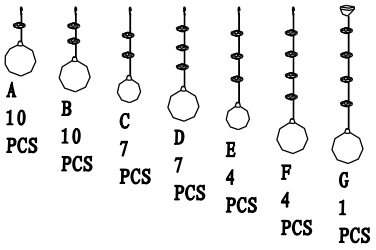

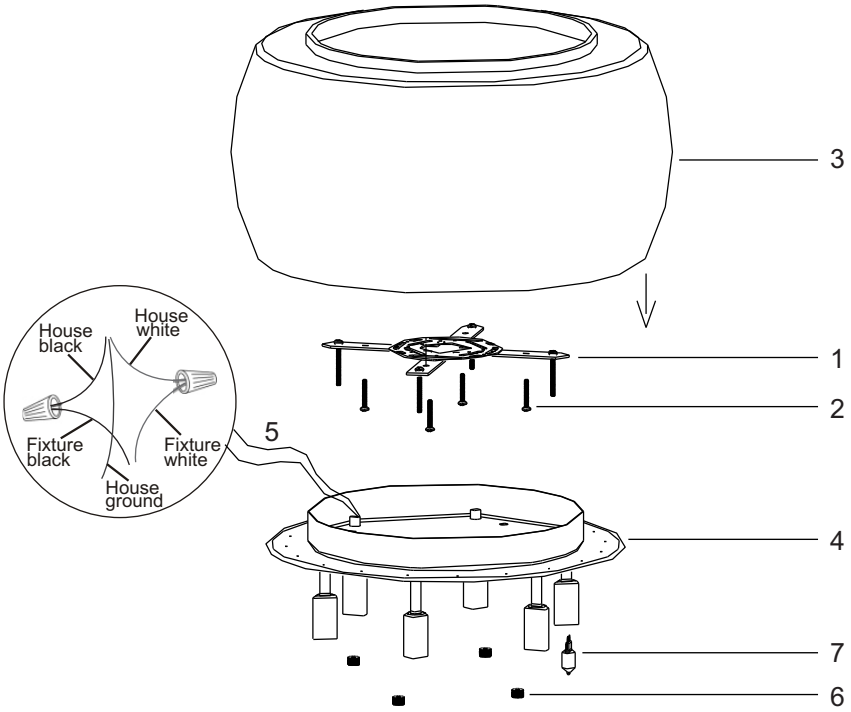

INSTALLATION INSTRUCTIONS:

- Ensure main supply is switched off.
- Fit mounting bracket (1) onto mounting surface with self-tapping screws (2).
- Put shade (3) onto ceiling plate (4).
- Connect wires (5) according to color (White to White, Black to Black). Connect all earth lug together onto the crossbar with green screw to tight.
- Fit ceiling plate onto mounting bracket with nuts (6).
- Fit lamps (7) firmly into lampholders.
- Hand crystals (A, B, C, D, E, F, G) onto ceiling plate according to the numerical sequence.
- Reconnect power.

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.